


GENERAL NOTES:


1. FOR SIDEWALK CONSTRUCTION DETAILS AND WIDTHS SEE DWG. 2430.
2. SETBACK TO BE DETERMINED BY AVAILABLE R/W (IF LESS THAN 2 FT. USE CURB TYPE SIDEWALK).

CONSTRUCTION NOTES:

- A. WEAKENED PLANE JOINT ALIGNMENT TO BE RADIAL.
- B. 1/2" EXPANSION JOINT.
- C. WEAKENED PLANE JOINTS SHALL NOT BE GREATER THAN 6 FT. O.C. BETWEEN EXPANSION JOINTS, MEASURED ALONG C OF SIDEWALK.

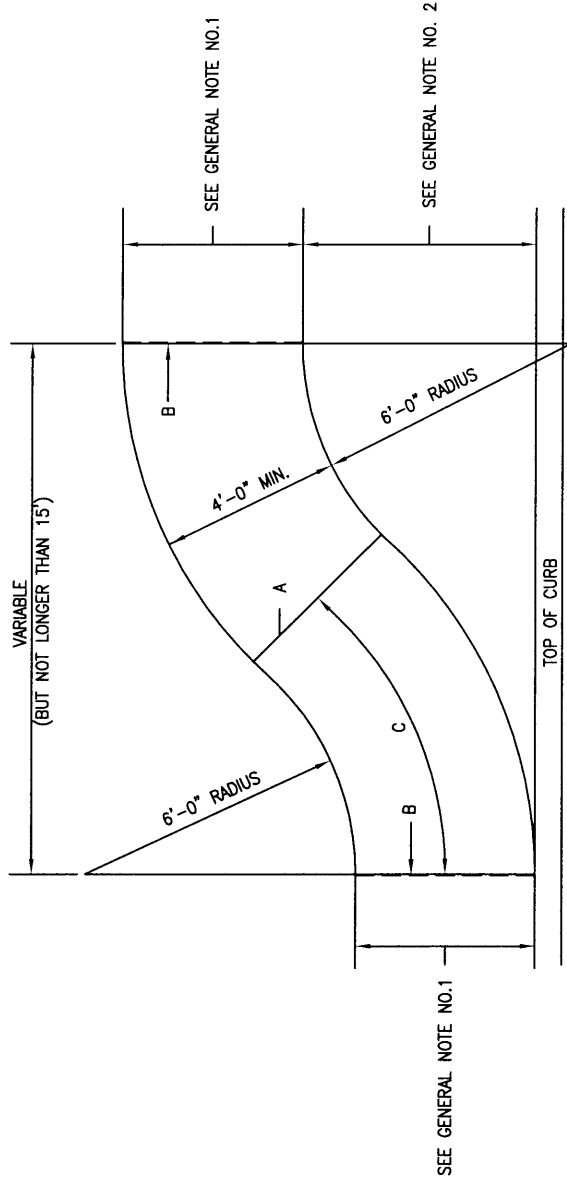

CURB TYPE TO OFFSET TYPE

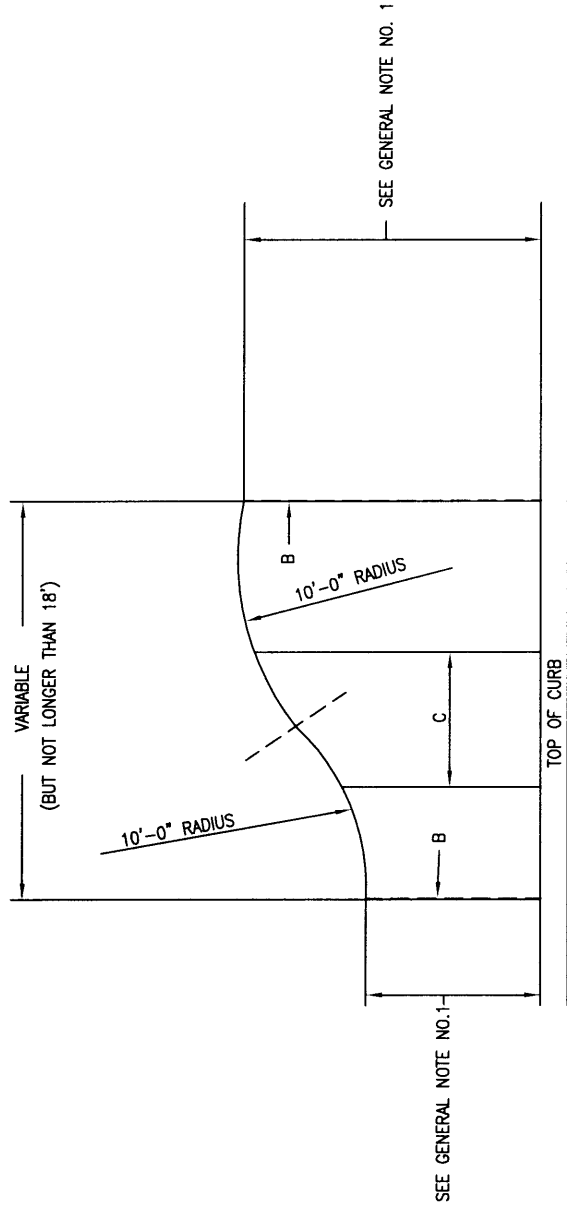

CURB TYPE WITH VARYING WIDTHS

REVISIONS

NM APWA

PAVING
SIDEWALK TRANSITIONS

DWG. 2432

AUG. 1986